
OPERATING INSTRUCTIONS

Check the following fluid levels daily or prior to starting unit:

- Engine oil
- Compressor system oil (oil level should be visible within the pump panel mounted sight glass)

COMPRESSED AIR FOAM OPERATIONS

Follow the instructions for the installed proportioning system for foam solution operations. Safe operations dictate the presence of foam concentrate in the water stream prior to the injection of compressed air. If foam concentrate is not present, a condition known as “slug flow” will occur, where unmixed water and air is discharged through a nozzle in an erratic manner.

Discharge pressures for compressed air foam operations typically range between 80 and 120 PSI in a flow state. Set water discharge pressure at the desired level. NOTE: Compressed air foam does not have the hydraulic characteristics of plain water or foam solution. Therefore, standard pump hydraulics practices do not apply to CAFS operations.

Start the compressor system engine. Refer to the engine owner’s manual.

Advance the throttle control to the fully open position.

Move Auto Sync controls to the AUTO / RUN positions. Air pressure as shown on the air pressure gauge should rise to within plus or minus 5% of the water discharge pressure. The Auto Sync system will balance the air and water pressures throughout a range of 40 PSI up to 130 PSI. Optimal compressed air foam system performance occurs at discharge flow pressures of 80-120 PSI.

Set the proportioner at 0.2% - 0.4% for normal Class A combustibles. The type and brand of foam concentrate used and the tactical objective dictate proportioning rates.

COMPRESSED AIR FOAM OPERATIONS (continued)

Open desired discharge valve(s) by pulling the “TEE” handle approximately 1-1/2” from the closed position. Controlling the amount of foam solution entering the discharge stream sets the foam expansion ratio. High solution flows restrict the amount of air admitted and result in lower expansion or “wet” foam. To produce higher expansion or “drier” foam, simply gate back the amount of solution admitted.

Fully open the air valve(s) to the desired discharge(s). Adjust the solution flow to produce the desired foam consistency.

Foam is formed during the transition through the hose. To produce acceptable finished foam, sufficient hose length must be provided on the discharge. Refer to Table 1 for minimum hose lengths for CAFS operations.

WARNING: Nozzle reaction force is significantly increased at the time the nozzle valve is opened in compressed air foam operations. OPEN CAFS NOZZLES SLOWLY!

SHUT-DOWN PROCEDURE

- **Close air valve(s)**
- **Turn off Foam proportioner**
- **Flow clear water through discharge hose(s) until no bubbles are present**
- **Close discharge valve(s)**
- **Move Auto Sync controls to UNLOAD / AUTO**
- **Shut air compressor engine down**
- **After the engine is shut down, the compressor system will vent itself, creating an audible hiss as compressed air is evacuated from the pressure vessel / sump.**

COMPRESSED AIR ONLY OPERATION

The air compressor may be utilized to operate air tools, fill air bags or other pneumatic operations that require up to 110 CFM of free air, if the apparatus is equipped with an auxiliary air outlet and these instructions are strictly followed. The apparatus fire pump must be in operation at the time the air compressor is running. Air compressor cooling is provided by water that is circulated by the fire pump through the compressor cooler and returned back to the booster tank. compressed air only operation time is limited by the amount of available cooling water in the booster tank.

COMPRESSED AIR ONLY OPERATION (continued)

The water in the booster tank will eventually become heat saturated and ineffective at cooling the air compressor. Watch the compressor temperature gauge closely!


After compressor engine start, ensure that the water pressure as shown on the panel mounted gauge rises. Move Auto Sync controls to the RUN / FIXED positions. Air pressure will rise to the preset pressure setting on the air compressor, approximately 150-PSI with the engine throttled-up. Connect the air discharge hose and open the air supply valve.

Extended compressed air only operations necessitate connection of an external water source to the pump inlet and closing of the tank to pump valve for proper compressor cooling. In this case, cooling water will flow into the booster tank at 4-6 GPM, eventually overflowing the tank

WARNINGS

- **Compressed air can be dangerous. Read and understand the operating instructions for the Pneumax compressed air foam unit and individual components prior to operating.**
- **DO NOT use the compressed air foam unit as an air source for SCBA or any breathing air supply.**
- **Discharge outlets that are capped hose lines that are valved and charged and the air compressor sump may contain compressed air. Relieve all pressure BEFORE attempting to remove any caps, fittings, nozzles, or to perform maintenance to prevent serious personal injury.**
- **Nozzle reaction force is significantly increased at the time the nozzle valve is opened in compressed air foam operations. OPEN CAFS NOZZLES SLOWLY!**
- **Operating the compressed air foam unit with water and compressed air pumped through a discharge without foam concentrate will create a potentially dangerous condition known as “Slug Flow”; where unmixed pockets of water and air are passed through the nozzle, causing erratic nozzle reaction.**
- **For compressed air foam operations, use only fire hose that is rated at 200 PSI or higher working pressure.**
- **The unit operator should have a thorough understanding of “Boyle’s Law” (The law of compressed gases) prior to operating the compressed air foam unit.**

Pneumax/GHH Rand CE66G Water Cooled Rotary Screw Air Compressor

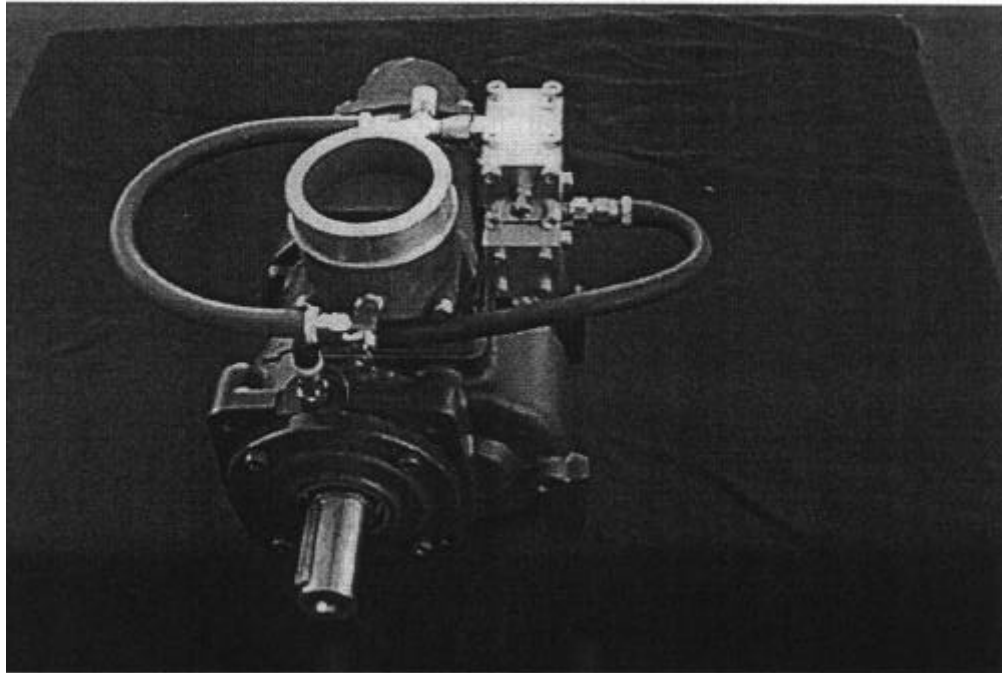

HOW IT WORKS

The air compressor used in this application is a GHH Rand model CE66G, oil flooded rotary screw type. Rotary screw air compressors are very common in industrial applications. This type of compressor injects oil into itself, where it lubricates, seals, cools, and silences the compressor. The oil is then entrained into the air discharge from the compressor. This air/oil mixture is discharged into a sump tank where most of the oil separates from the air. The oil is then sent via hydraulic hose to a combination cooler/thermostat/filter unit. It is cooled to remove compression and friction heat, filtered, and sent to the oil injection port on the compressor. The cycle is then repeated.

The oil mist that remains in the airstream is recovered by an air/oil separator system. This system recovers the oil mist in a spin-on cartridge that has a siphon tube that picks-up the recovered oil for return to the air compressor

HOW IT WORKS (continued)

A modulating inlet valve controls the compressor's air output. The inlet valve is opened and closed by the Auto Sync pressure control system.

The compressor cooling system circulates water from the fire pump through the compressor oil cooler and back to the tank to remove heat from the compressor oil system. The compressor oil thermostat is preset at 175 degrees. The compressor oil temperature should not exceed 220 degrees. If this occurs, check the water supply, pump prime, restrictions in the cooling water system and for low oil level in the sump.

It is important to ensure that there is a water supply to compressor cooler whenever the compressor engine is running. Air compressor damage may result from running it without water flow through the cooler.

AIR COMPRESSOR SYSTEM SERVICE AND MAINTENANCE

Excessive heat build-up and oil system contamination are most common causes of compressor system problems and premature wear. With proper operation and maintenance, the compressor system should far outlast the vehicle it is mounted on. Adherence to the following guidelines will prevent potentially costly damage.

- 1. There is a sight gauge provided on the oil reservoir and visible through a hole on the pump panel. The oil level should show at approximately one-quarter up from the base of the window. Check the oil on level ground, prior to system start up. If the system has recently been run, wait 10 minutes after shutdown for the oil to stabilize before checking the oil level. The compressor uses common transmission oil. This oil is classified as Dextron 3 viscosity and is sold under various trade names. Many are sold as an "anti wear" hydraulic oil and are available from auto parts or lubricating oil suppliers.**
- 2. The oil should be changed after the first 30 hours of system operation. After that, the oil should be changed annually. There is a drain plug located at the bottom of the sump. The oil fill cap is located on top of the unit.**
- 3. Change the compressor system oil filter at the same time as the oil is changed. The spin-on filter cartridge is a Donaldson hydraulic oil filter. Call Pneumax for replacement elements.**

AIR COMPRESSOR SYSTEM SERVICE AND MAINTENANCE (cont.)

4. Run the compressor for 2 minutes after changing the oil, then re-check the oil level and add oil as necessary. **DO NOT OVERFILL.**

5. Visually inspect the compressor oil system weekly for signs of leaks. Check the air compressor Poly Chain drive for proper tension and signs of wear monthly or more frequently as dictated by the amount of use.

6. Inspect the compressor air intake filter and clean or replace as necessary. The environment in which the unit operates will determine the frequency of air filter service and replacement. In any situation, replace no less frequently than yearly.

7. Replace the oil / air separator cartridge every 24 months, or if the unit's oil consumption suddenly increases. A sudden increase may be caused by a hole in the internal media of the cartridge allowing oil to carry through and discharge with the compressed air. Call Pneumax for replacement separator cartridges.

8. Completely drain the water from the compressor oil cooler in cold weather to prevent freeze damage.

9. Maintenance Schedule :

	Check Oil Level & for Oil Leaks	Change Compressor Oil	Change Oil Filter	Change Separator Cartridge
Daily or After Each Use	X			
Annually		X	X	
Every 24 Months				X

Refer to the Kubota engine owners manual for engine maintenance.

CAFS NOZZLE / FLOW RATE / HOSE COMBINATIONS

NOZZLES

Compressed air foam can be discharged through various types and sizes of nozzles. Fog nozzles breakdown the bubble structure of the foam, resulting in "wetter" or reduced expansion foam. Similarly, when utilizing smooth bore nozzles with a given hose diameter, smaller tips will discharge "wetter" foam.

FOAM CONCENTRATE RATIOS

Proportioner settings of 0.2% and 0.3% are typically adequate to produce compressed air foam that is formed in a hoseline and used on Class A combustibles. Higher settings will result in a "drier" appearing foam. Lower settings may result in "slug flow" or discharge pulsation caused by insufficient foam concentrate in solution to form foam in the hoseline.

For Class B or other type foam ratio settings, follow the instructions provided by the foam concentrate manufacturer.

HOSE

Utilize fire hose that is rated by the hose manufacturer for use with CAPS. Since the foam is formed during its transition through the hoseline, it is important to utilize the minimum recommended hose lengths, unless a static mixer is utilized. There is significantly less friction and head loss with compressed air foam as compared to water or foam solution. Hence, effective fire streams can be achieved with longer hose lays. Refer to the Suggested Guidelines for the Production of Mid-Range Compressed Air Foam.

NOTE

Compressed air foam systems have the ability to produce a foam of shaving cream consistency. While this type of foam is highly stable and possesses a long drain time, it is essential to ensure that the foam will release sufficient water to extinguish a fire in a direct attack situation. This type of foam is typically suited for defensive operations such as exposure protection, barriers or fuels pretreatment.

SUGGESTED GUIDELINES FOR THE PRODUCTION OF MID-RANGE COMPRESSED AIR FOAM

1" HOSE DIAMETER JACKETED

1 GPM to 1 CFM

½" Tip Water Flow: 15 GPM Air Flow: 15 CFM
Disch. Pressure: 125-150 PSI
Min/Max Hose Length: 35' to over 400'

2 GPM to 1 CFM

½" Tip Water Flow: 30 GPM Air Flow 15 CFM
Disch. Pressure: 100-150 PSI
Min/Max Hose Length: 35' to over 400'

1 GPM to 1 CFM

¾" Tip Water Flow: 20 GPM Air Flow: 20 CFM
Disch. Pressure: 125-150 PSI
Min/Max Hose Length: 35' to over 400'

2 GPM to 1 CFM

¾" Tip Water Flow: 40 GPM Air Flow: 20 CFM
Disch. Pressure: 100-150 PSI
Min/Max Hose Length: 35' to over 400'

1-1/2" HOSE DIAMETER

1 GPM to 1 CFM

1" Tip Water Flow: 30-40 GPM Air Flow: 30-40 CFM
Disch. Pressure: 110-150 PSI
Min/Max Hose Length: 100' to over 800'

2 GPM to 1 CFM

1" Tip Water Flow: 60-80 GPM Air Flow: 30-40 CFM
Disch. Pressure: 100-150 PSI
Min/Max Hose Length: 100' to over 800'

1 GPM to 1 CFM

1-3/8" Tip Water Flow: 50-60 GPM Air Flow: 50-60 CFM
Disch. Pressure: 110-150 PSI
Min/Max Hose Length: 100' to over 800'

2 GPM to 1 CFM

1-3/8" Tip Water Flow: 90-120 GPM Air Flow: 50-60 CFM
Disch. Pressure: 100-150 PSI

Min/Max Hose Length: 100' to over 800'

Note:

System flows are very flexible. The flow of any discharge can vary according to the situation and conditions.

It is possible to make the discharge stream wetter or drier by changing the amount of solution or air in the hose.

The stream can also vary by changing the tip size at the nozzle


The Bigger the diameter tip the drier the foam

The Smaller the diameter tip the wetter the foam

Compressed Air Foam is best when discharged through a smooth bore nozzle.

REV	DESCRIPTION	DATE	ECR #
-		--/--/----	----

- NOTES:
1. USE HYDRAULIC HOSE ONLY
 2. DO NOT INSTALL VALVE IN COOLING WATER LINE
 3. LINE OUT OF HEAT EXCHANGER TO BE PLUMBED EITHER TO PUMP INLET OR TO WATER TANK WITH CHECK VALVE IN LINE.
 4. OIL LEVEL IN OIL RESERVOIR SHOULD BE AT LOWER ELEVATION THAN COMPRESSOR. IF OIL RESERVOIR MUST BE PLACED HIGHER THAN COMPRESSOR, CONSULT PNEUMAX FOR ADDITIONAL PARTS THAT MUST BE INSTALLED.

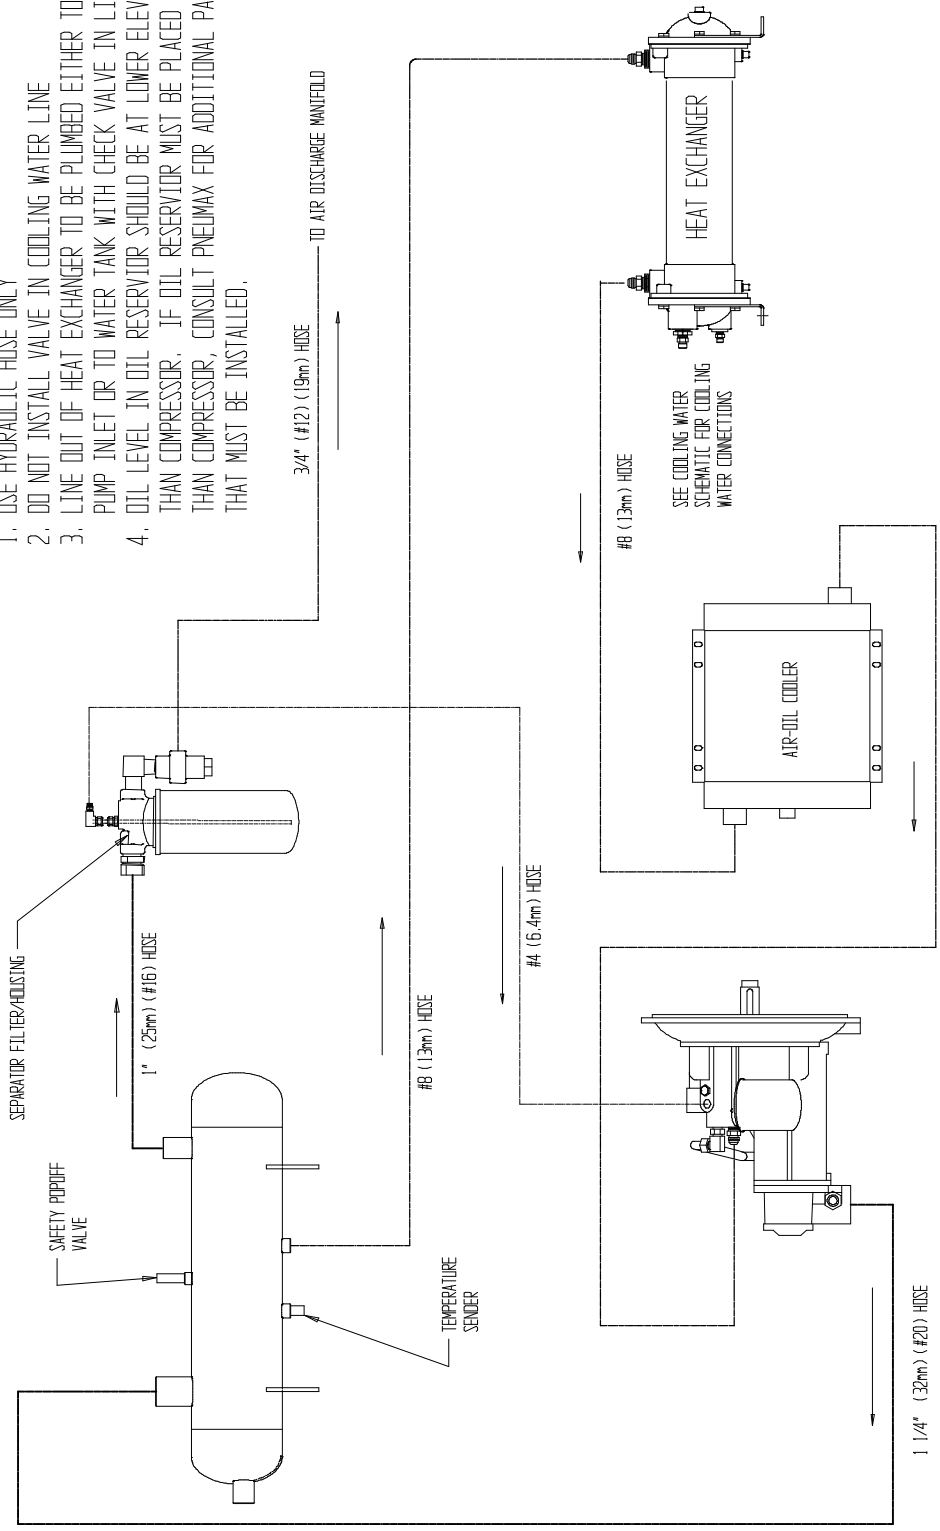

	8557 N. 78TH AVE. PEORIA, AZ 85345 623-979-3388 FAX: 623-979-6949	DO NOT SCALE DRAWING TOLERANCE UNLESS OTHERWISE SPECIFIED .XX +/- 0.030 1/X .XXX +/- 0.010 ANGLES +/- 0.5°	THIS PRINT IS THE PROPERTY OF PNEUMAX, INC. AND IS LOANED TO YOU SUBJECT TO RETURN ON DEMAND UNLESS OTHERWISE AGREED TO IN WRITING BY PNEUMAX, INC. ITS CONTENTS ARE CONFIDENTIAL AND MUST NOT BE COPIED OR SUBMITTED TO THIRD PARTIES FOR USE OR EXAMINATION.	SIZE WEIGHT SHEET A --- 1 of 1 USED ON: 120-IN. HOISTON	DRAWN 9/20/2002 DBB	HYDRAULIC SCHEMATIC 120-DM	DMG NO. 314028
--	--	---	--	---	------------------------	-------------------------------	-------------------

CONDITIONAL **2-YEAR** WARRANTY POLICY

PNEUMAX warrants, to the original Buyer only, that products and parts manufactured by PNEUMAX will be free from defects in material and workmanship under normal use and service for a period of two (2) years from the date the product is first placed in service, or two and one-half (2-1/2) years from the date of shipment by PNEUMAX, whichever period shall be the first to expire; provided the Buyer notifies PNEUMAX, in writing, of the defect in said product within the warranty period, and said product is found by PNEUMAX to be nonconforming with the aforesaid warranty. When required in writing by PNEUMAX, defective products must be promptly returned by Buyer to PNEUMAX at PNEUMAX' plant at Peoria, Arizona, or at such other place as may be specified by PNEUMAX, with transportation and other charges prepaid. A **Returned Material Authorization (RMA)** is required for all products and parts and may be requested by phone, fax or mail. The aforesaid warranty excludes any responsibility or liability of PNEUMAX for:

- (a) damages or defects due to accident, abuse, misuse, abnormal operating conditions, negligence, accidental causes, or improper maintenance, or attributable to written specifications or instructions furnished by Buyer;
- (b) defects in products manufactured by others and furnished by PNEUMAX hereunder, it being understood and agreed by the parties that the only warranty provided for such products shall be the warranty provided by the manufacturer thereof which, if assignable, PNEUMAX will assign to Buyer, if requested by Buyer;
- (c) any product or part, altered, modified, serviced or repaired other than by PNEUMAX, without its prior written consent; and
- (d) the cost of dismantling, removing, transporting, storing, or insuring the defective product or part and the cost of reinstallation.
- (e) normal wear items (including, but not limited to belts, hoses, check valves, packing, strainers, filters, light bulbs, anodes, intake screens, mechanical seals, etc.).

This warranty is subject to PNEUMAX' Conditions of Sale (detailed on PNEUMAX Invoice) as currently in effect all of which are herein incorporated and by this reference made a part hereof.

All other warranties are excluded, whether express or implied by operation of law or otherwise, including all implied warranties of merchantability or fitness for purpose. PNEUMAX shall not be liable for consequential or incidental damages directly or indirectly arising or resulting from the breach of any of the terms of this limited warranty or from the sale, handling, or used of any PNEUMAX product or part. PNEUMAX' liability hereunder, either for breach of warranty or for negligence, is expressly limited at PNEUMAX' option:

- (A) to the replacement at the agreed point of delivery of any product or part, which upon inspection by PNEUMAX or its duly authorized representative, is found not to conform to the limited warranty set forth above, or
- (B) to the repair of such product or part, or
- (C) to the refund or crediting to buyer of the net sales price of the defective product or part.

Buyer's remedies contained herein are exclusive of any other remedy otherwise available to Buyer.

Pneumax, Inc.
8557 N 78th Ave
Peoria, AZ 85345
www.pneumaxcafs.com

